



Installation Instructions

Always Check Stock # and Color Before Starting Installation



2004-06 Nissan 350Z NS 5410 Top HT01 Blk/Blk Twill Vinyl Material

NS5410 HT01 10 10

Twill Vinyl Black/Black



(MAKE LABELS) ONLY

GLASS
HEATED

DATE: 10/22

NS5410 HT01

Ns5410 Ht01 Bk/Bk Twill Vinyl Htd/Top



Please check the stock# and color before you start the installation

Please make sure windows are working, if they dont drop, it will hit top wearing the binding.

Electron Top Mfg.



Remove elastic straps from the bows.



Install new elastic straps to the bows.



Remove plastic cover from the back of the top frame.



View of the plastic cover.

Electron Top Mfg.




This is a view of an old top, it always tears loose and frays in this area. Take off metal plates from the plastic covers.



Reinstall the plastic covers.



This is a closer view of the plastic cover reinstalled.

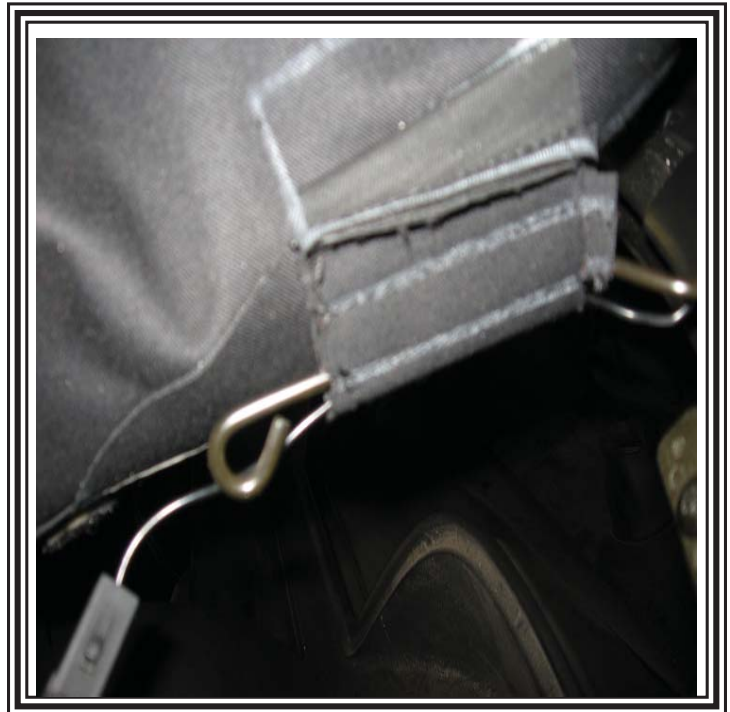

Run the metal rod and the defroster wires at the back of the top next to the rear window through the pocket on the top.

Electron Top Mfg.



The flaps and top below the window are pop riveted down to the plastic cover using the original metal plate.



Fasten the top bow listing to the front bow of the frame.



A close up view of the front bow.



Pass the side cables through both the drivers side and passengers side of the top.

Electron Top Mfg.



This is a close up view of the side cable exiting the front of the top.



Fasten the front of the top to the front of the header bow.



Reinstall the metal plate back on the front of the header bow.



Reinstall both the passenger and drivers side weather strips.

Electron Top Mfg.



Fasten the rear channel flaps to the front of the C pillar post behind the quarter glass windows. This view is of the drivers side of the frame.



This view shows the installation of the channel flap on the passengers side of the frame.



Fasten or secure the back of the top to the back of the frame. Next reinstall the weather strips to the back of the frame.

