



Installation Instructions

Always Check Stock # and Color Before Starting Installation



2005-09 Chrysler Crossfire

CH5460 Top

GR11 Black/Black Sonnenland Material

CH5460 GR11 10 10

Sonnenland Black/Bk



GLASS
HEATED

(MAKE LABELS) ONLY

DATE: 10/22

CH5460 GR11

Ch5460 Gr11 Bk/Bk SonnenLand Top/Heate



Take the top and slide both of the bow listings through both top bow channels at the same time.

Electron Top Mfg.



This is a picture of the top after sliding the bow listings into the channels of both top bows.



Slide the side cables through the sleeves on each side of the top. Attach the cable to the front of the header bow on both sides of the frame.



This is a picture of the cable at a different angle.




Pop rivet the strap on the side of the frame strut on each side of the frame.

Electron Top Mfg.



Pop rivet another strap at the bottom of the quarter to the frame (location shown)above.

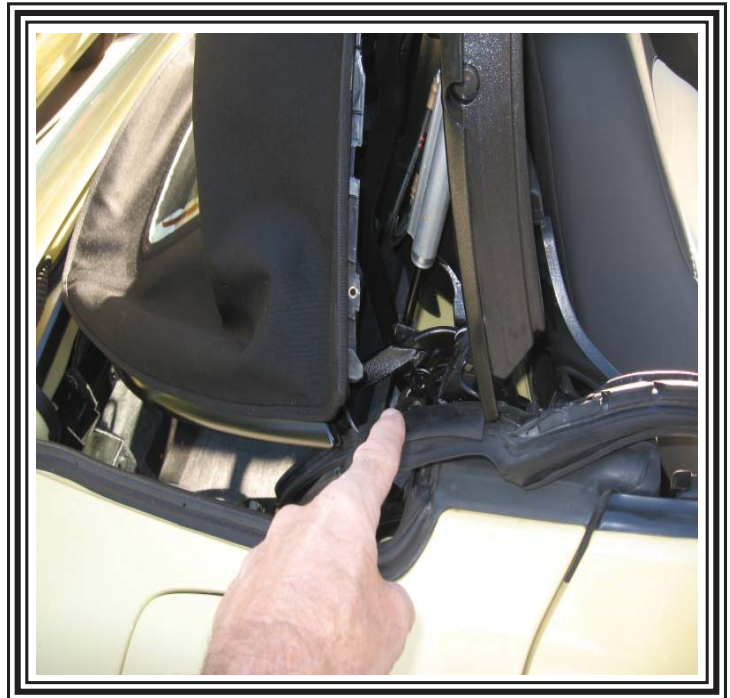

Lock the quarters of the top into the frame. Make sure that you install a pop rivet at the bottom of the quarters.




This is a picture of the quarters of the top locked in at a different angle.



Lock both the plastic pieces on both sides of the header bow and then install a pop rivet to keep it secure.

Electron Top Mfg.

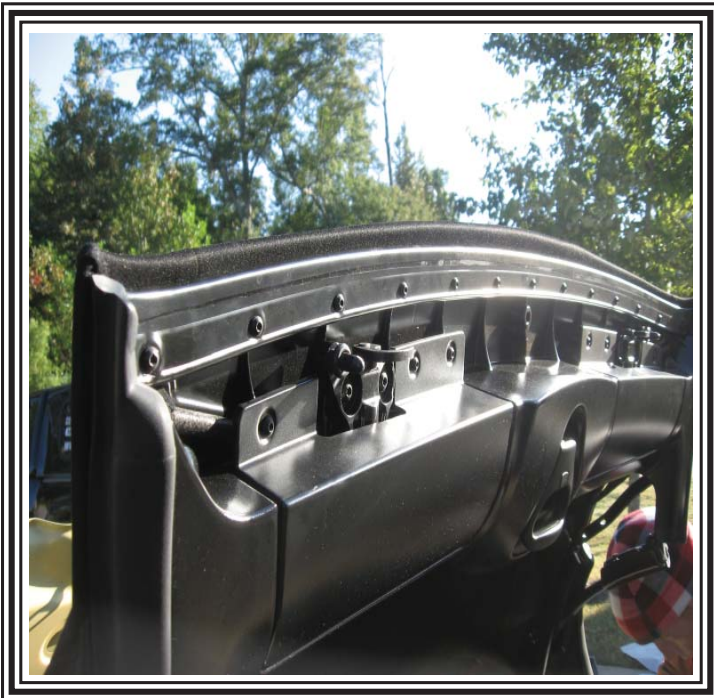

Fasten the front of the top all the way across the header bow. Reinstall the metal plate and the screws to secure the top in place.



Reinstall the front weather strip.



Put the metal tabs back on the rear plastic piece that is attached to the top. Fasten the back of the top to the frame.



Lock in the rear quarter weather stripping.

Electron Top Mfg.



The finished top.

