



Electron Top Mfg.

rev 9/10/2010

Installation Instructions

Always Check Stock # and Color Before Starting Installation



**1997-02 Porsche Boxster
PO 7760 Top
GR11 Blk/Blk Sonnenland Material**

P07760 GR11
Black/Blk
Sonnenland 10 12



DATE: 12/04 (MAKE LABELS) ONLY

P07760 GR11

DATE: 12/04



Electron Top Mfg.



This is a picture of top completely off the car also a shot of the top of the headliner.



Slide both bow listings through the top frame.



Take the quarter flap and slide it in the plastic extrusion in the quarter from top to bottom.



This picture shows a view of the previous view completed with the flap in place.

Electron Top Mfg.



Flip up the back of the frame and lock in the rear flap into the frame. Gradually work the rubber strip in picture # 2 all the way around.



This is a picture of the rubber strips finished.



Take the other rubber piece and gradually work that also into the other groove.



Glue the flap and the frame together.

Electron Top Mfg.



In this picture of the previous page the flap and the frame are glued together. This is the view from the right side.



This is a view of the left side.




Screw into the material first to lock the cable into place.




Take the rubber cord that is sewn into the top and lock that into the bottom of the quarter frame from rear to front.

Electron Top Mfg.

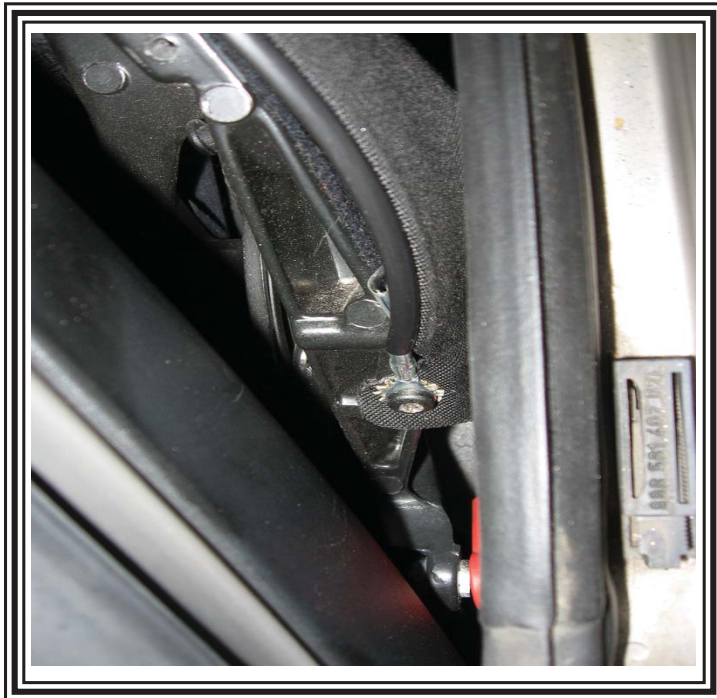

This is a picture of the cable screwed into the frame.

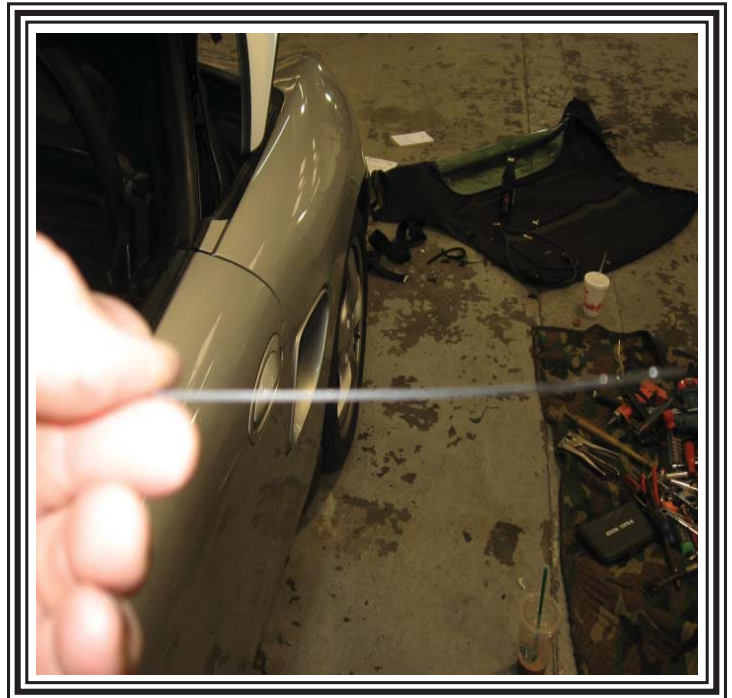

Take the 5" metal spring plate (the one with the two screw holes in it) and bend into a half moon curve.



Take the plate you just bent and screw it down on the quarter. By bending the plate it keeps tension on the plastic piece as the top is coming forward.



Then glue the top to the metal piece in front of the cable making sure that the holes in the top match up with the holes in the metal plate.

Electron Top Mfg.



This is a picture of what the metal plate looks like glued on.



This is a picture of the metal plate secured to the frame.



This picture shows the strap at the top of the quarter with velcro on both sides.



This picture shows the strap secured to the bar.

Electron Top Mfg.



Glue the front of the top to the front of the frame.



This picture shows the front of the top glued in place.



You then need to secure the weather strip retainer to the frame and then lock in the weather strip



This shows what the weather strip looks like when it is locked in.

Electron Top Mfg.



In this picture it shows where the weather strip mounts to the frame.



The finished top (a rear quarter view.)



Another view, this one of the passenger side.



Drivers side view of the finished top.